






## Used In Beckman Coulter Class H, R, and S Preparative Ultracentrifuges

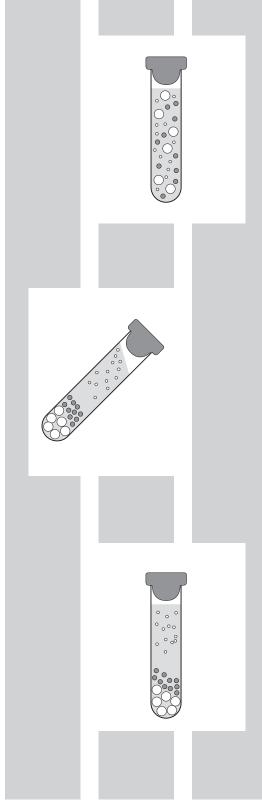

© 2006 Beckman Coulter, Inc. Printed in the U.S.A.



This safety notice summarizes information basic to the safe use of the rotor described in this manual. The international symbol displayed above is a reminder to the user that all safety instructions should be read and understood before operation or maintenance of this equipment is attempted. When you see the symbol on other pages throughout this publication, pay special attention to the specific safety information presented. Observance of safety precautions will also help to avoid actions that could damage or adversely affect the performance of the rotor. This rotor was developed, manufactured, and tested for safety and reliability as part of a Beckman Coulter ultracentrifuge/rotor system. Its safety or reliability cannot be assured if used in a centrifuge not of Beckman Coulter's manufacture or in a Beckman Coulter ultracentrifuge that has been modified without Beckman Coulter's approval.

Handle body fluids with care because they can transmit disease. No known test offers complete assurance that such fluids are free of micro-organisms. Some of the most virulent—Hepatitis (B and C) viruses, HIV (I–V), atypical mycobacteria, and certain systemic fungi—further emphasize the need for aerosol protection.



Handle other infectious samples according to good laboratory procedures and methods to prevent spread of disease. Because spills may generate aerosols, observe proper safety precautions for aerosol containment. Do not run toxic, pathogenic, or radioactive materials in this centrifuge without taking appropriate safety precautions. Biosafe containment should be used when Risk Group II materials (as identified in the World Health Organization *Laboratory Biosafety Manual*) are handled; materials of a higher group require more than one level of protection.

The rotor and accessories are not designed for use with materials capable of developing flammable or explosive vapors. Do not centrifuge such materials in nor handle or store them near the ultracentrifuge.



Although rotor components and accessories made by other manufacturers may fit in the Type 45 Ti rotor, their safety in this rotor cannot be ascertained by Beckman Coulter. Use of other manufacturers' components or accessories in the Type 45 Ti rotor may void the rotor warranty and should be prohibited by your laboratory safety officer. Only the components and accessories listed in this publication should be used in this rotor.



Make sure that filled containers are loaded symmetrically into the rotor and that opposing tubes are filled to the same level with liquid of the same density. Make sure that cavities in use have the proper spacers inserted (if applicable) before installing the rotor lid.



If disassembly reveals evidence of leakage, you should assume that some fluid escaped the rotor. Apply appropriate decontamination procedures to the centrifuge and accessories.




Never exceed the maximum rated speed of the rotor and labware in use. Refer to the section on RUN SPEEDS, and derate the run speed as appropriate.



Do not use sharp tools on the rotor that could cause scratches in the rotor surface. Corrosion begins in scratches and may open fissures in the rotor with continued use.

#### **TYPE 45 Ti ROTOR**

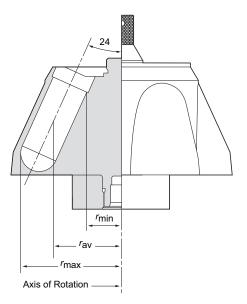

#### **SPECIFICATIONS**

Maximum speed    45 000 rpm      Density rating at maximum speed    1.2 g/mL
Relative Centrifugal Field* at maximum speed
At $r_{\max}$ (103.8 mm)
At $r_{av}$ (69.8 mm)
At $r_{\min}$ (35.9 mm)
k factor at maximum speed 133
Conditions requiring speed reductions see RUN SPEEDS
Number of tube cavities
Available tubes see Table 1
Nominal tube dimensions (largest tube)
Nominal tube capacity (largest tube)
Nominal rotor capacity
Approximate acceleration time to maximum speed
(fully loaded)
Approximate deceleration time from maximum speed
(fully loaded)
Weight of fully loaded rotor 12 kg (26 lb)
Rotor material titanium


\* Relative Centrifugal Field (RCF) is the ratio of the centrifugal acceleration at a specified radius and speed  $(r\omega^2)$  to the standard acceleration of gravity (g) according to the following formula:

RCF = 
$$\frac{r\omega^2}{g}$$

where r is the radius in millimeters,  $\omega$  is the angular velocity in radians per second (2  $\pi$  RPM /60), and g is the standard acceleration of gravity (9807 mm/s<sup>2</sup>). After substitution:

$$\text{RCF} = 1.12 \, r \, \left(\frac{\text{RPM}}{1000}\right)^2$$

#### DESCRIPTION

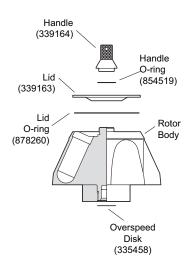

This rotor has been manufactured in a registered ISO 9001 or 9002 facility for use with the appropriately classified Beckman Coulter ultracentrifuge.

The Type 45 Ti, rated for 45 000 rpm, is a fixed angle rotor designed to centrifuge up to six tubes at a 24-degree angle to the axis of rotation. Used in Beckman Coulter class H, R, and S preparative ultracentrifuges, the rotor develops centrifugal forces sufficient for applications including pelleting of small particles, and purification of viruses and subcellular organelles using sucrose gradients. Up to 564 mL of sample and gradient can be centrifuged per run.

The rotor is made of titanium and is finished with black polyurethane paint (a slightly rough, or grainy, surface is normal). The aluminum lid and handle are red-anodized for corrosion resistance. The color also identifies the rotor as a high-performance rotor that uses red or blue aluminum caps with maximum-diameter plastic tubes. O-rings made of Buna N rubber in the lid and handle maintain atmospheric pressure inside the rotor during centrifugation, if they are properly lubricated. Four small holes in the lid provide a temporary vent, preventing pressure build-up and extrusion of the large lid O-ring in the event of leakage. Because of the weight of the rotor, drive pins are not required in the rotor drive hub cavity.

The rotor is equipped with an overspeed disk on the rotor bottom. Rotor speed exceeding 45 000 rpm will be detected in instruments with the photoelectric overspeed detection system.

See the Warranty at the back of this manual for warranty information.

#### **PREPARATION AND USE**

Specific information about the Type 45 Ti rotor is given here. Information common to this and other rotors is contained in Rotors and Tubes for Preparative Ultracentrifuges (publication LR-IM) which accompanies this manual. Use this rotor manual, together with publication LR-IM, for complete rotor and accessory operation.

#### 

Although rotor components and accessories made by other manufacturers may fit in the Type 45 Ti rotor, their safety in this rotor cannot be ascertained by Beckman Coulter. Use of other manufacturers' components or accessories in the Type 45 Ti rotor may void the rotor warranty and should be prohibited by your laboratory safety officer. Only the components and accessories listed in this publication should be used in this rotor.

#### PRERUN SAFETY CHECKS




*Read the Safety Notice page at the front of this manual before using the rotor.* 

- 1. Make sure that the rotor and lid are clean and show no signs of corrosion or cracking.
- 2. Make sure that the 40-sector (45 000 rpm) overspeed disk is properly attached to the rotor bottom. If the disk is missing or damaged, replace it according to the instructions in *Rotors and Tubes*.
- 3. Check the chemical compatibilities of all materials used (refer to Appendix A in *Rotors and Tubes*).
- 4. Verify that the tubes and bottles being used are listed in Table 1.


#### **ROTOR PREPARATION**

For runs at other than room temperature, refrigerate or warm the rotor beforehand for fast equilibration.

1. Be sure that metal threads in the rotor are clean and lightly but evenly lubricated with Spinkote<sup>™</sup> lubricant (306812). Also ensure that O-rings are lightly but evenly coated with silicone vacuum grease (335148).



2. Load the filled containers symmetrically into the rotor. (Refer to TUBES AND BOTTLES on page 7 for information about containers.) If fewer than six tubes are being run, they must be arranged symmetrically in the rotor (see Figure 1). Opposing tubes must be filled to the same level with liquid of the same density.

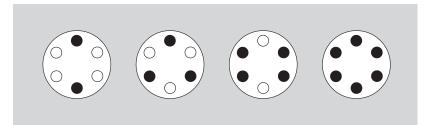


*Figure 1. Arranging Tubes in the Rotor. Two, three, four, or six tubes can be centrifuged per run if they are arranged in the rotor as shown.* 

3. Complete loading by placing the correct spacers (if required) over the tubes.


#### 

Place filled tubes in at least two opposing cavities. Make sure that cavities in use have the proper spacers inserted (if applicable) before installing the rotor lid.

4. Put the lid in place and tighten by hand as firmly as possible.

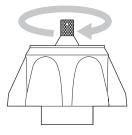

#### **OPERATION**

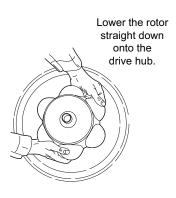

- 1. Carefully place the rotor on the drive hub.
- 2. Refer to the applicable instrument instruction manual for ultracentrifuge operation.
- 3. For additional operating information, see the following:
  - RUN TIMES, page 12, for using k factors to adjust run durations
  - RUN SPEEDS, page 13, for information about speed limitations
  - SELECTING CsCl GRADIENTS, page 15, for methods to avoid CsCl precipitation during centrifugation

#### **REMOVAL AND SAMPLE RECOVERY**



If disassembly reveals evidence of leakage, you should assume that some fluid escaped the rotor. Apply appropriate decontamination procedures to the centrifuge and accessories.



Quick-Seal Tube Removal Tool (361668)

- 1. Remove the rotor from the centrifuge by lifting it straight up and off the drive hub.
- 2. Remove the rotor lid.
- 3. Use the appropriate removal tool (listed in the SUPPLY LIST) to remove the spacers and tubes.

#### **TUBES AND BOTTLES**

The Type 45 Ti rotor uses the tubes and bottles listed in Table 1. Be sure to use only those items listed, and to observe the maximum speed limits and fill volumes shown. (Maximum fill volume is the maximum amount that can be centrifuged in the container listed.) Refer to Appendix A in *Rotors and Tubes* for chemical compatibilities of tube, bottle, and accessory materials.

Table 1. Available Tubes and Bottles for the Type						
Tube			Required Accessory		Max Speed/	
Dimensions	Description	Part Number	Max Fill Vol	Description	Part Number	Max Speed/ RCF/ <i>k</i> Factor
38 × 102 mm	Quick-Seal Ultra-Clear	345778 (pkg/25)	94 mL	titanium spacer	342697	45 000 rpm 235 000 × <i>g</i> 133
38 × 102 mm	Quick-Seal polyallomer	345776 (pkg/25)	94 mL	titanium spacer	342697	45 000 rpm 235 000 × <i>g</i> 133
38 × 102 mm	Ultra-Clear	345777 (pkg/25)	94 mL	red aluminum cap	330901ª	45 000 rpm 235 000 × <i>g</i> 133
38 × 102 mm	thinwall polyallomer	345775 (pkg/25)	94 mL	red aluminum cap	330901 <sup>b</sup>	45 000 rpm 235 000 × <i>g</i> 133
38 × 102 mm	thickwall polyallomer	355643 (pkg/25)	81 mL	blue aluminum cap	338905	45 000 rpm 235 000 × <i>g</i> 133
			47 mL	none	_	15 000 rpm 26 200 × <i>g</i> 1195
38 × 102 mm	thickwall polycarbonate	355628 (pkg/25)	81 mL	blue aluminum cap	338905	45 000 rpm 235 000 × <i>g</i> 25
			47 mL	none	_	15 000 rpm 26 200 × <i>g</i> 1195
38 × 102 mm	polycarbonate bottle assembly (bottle only— 355655)	355622 (pkg/6)	70 mL	aluminum cap	355623	45 000 rpm° 235 000 × g 133
16 × 76 mm	Ultra-Clear	r 344085 13.5 m (pkg/50)	13.5 mL	Delrin <sup>d</sup> adapter <sup>e</sup>	303448	39 000 rpm 149 000 × <i>g</i>
	(ркg/50)			aluminum cap	330860	149 000 × g 107
16 × 76 mm	16 × 76 mmthinwall polyallomer326814 (pkg/50)	13.5 mL	Delrin adapter <sup>e</sup>	303448	39 000 rpm 149 000 × <i>g</i>	
		(pkg/50)		aluminum cap	330860	149 000 × g 107
16 × 76 mm	thickwall polyallomer	355640 (pkg/25)	13.5 mL	Delrin adapter <sup>e</sup>	303448	39 000 rpm 149 000 × <i>g</i>
				aluminum cap $^{\mathrm{f}}$	338907	107

Table 1. Available Tubes and Bottles for the Type 45 Ti Rotor. Use only the items listed here.

- continued

Tube			Required Accessory			
Dimensions	Description	Part Number	Max Fill Vol	Description	Part Number	Max Speed/ RCF/ <i>k</i> Factor
16 × 76 mm	thickwall polycarbonate	355630 (pkg/25)	13.5 mL	Delrin adapter <sup>e</sup>	303448	39 000 rpm 149 000 × <i>g</i>
	polycarbonate	(prg/20)		aluminum cap <sup>g</sup>	338907	107
13 × 89 mm	Ultra-Clear	344087 (pkg/50)	10.5 mL	Delrin adapter <sup>e</sup>	303459	39 000 rpm 156 000 × <i>g</i>
		(0.3,00)		aluminum cap	346256 <sup>h</sup>	110
13 × 89 mm	thinwall polyallomer	326822 (pkg/50)	10.5 mL	Delrin adapter <sup>e</sup>	303459	39 000 rpm 156 000 × <i>g</i>
	1			aluminum cap	346256 <sup>h</sup>	110
13 × 89 mm	thickwall polyallomer	355639 (pkg/25)	10.5 mL	Delrin adapter <sup>e</sup>	303459	39 000 rpm 156 000 × <i>g</i> 110
13 × 89 mm	thickwall polycarbonate	355629 (pkg/25)	10.5 mL	Delrin adapter <sup>e</sup>	303459	39 000 rpm 156 000 × <i>g</i> 110
13 × 64 mm		344088 (pkg/50)	6.5 mL	Delrin adapter <sup>e</sup>	303449	39 000 rpm 138 000 × <i>g</i>
		(pkg/30)		aluminum cap	346256 <sup>h</sup>	90
13 × 64 mm	13 × 64 mm thinwall polyallomer		6.5 mL	Delrin adapter <sup>e</sup>	303449	39 000 rpm 138 000 × g
				aluminum cap	346256 <sup>g</sup>	90
13 × 64 mm	thickwall polyallomer	355644 (pkg/25)	4 mL	Delrin adapter <sup>e</sup>	303449	39 000 rpm 138 000 × <i>g</i> 90
13 × 64 mm	thickwall polycarbonate	355645 (pkg/25)	4 mL	Delrin adapter <sup>e</sup>	303449	39 000 rpm 138 000 × <i>g</i> 90
13 × 51 mm	thickwall polyallomer	355641 (pkg/25)	3.5 mL <sup>i</sup>	aluminum adapter (holds 7 tubes)	350781	30 000 rpm 91 000 × <i>g</i> 151 <sup>j</sup>
13 × 64 mm	thickwall polycarbonate	355632 (pkg/25)	3.5 mL <sup>i</sup>	aluminum adapter (holds 7 tubes)	350781	30 000 rpm 91 000 × <i>g</i> 151 <sup>j</sup>

Table 1. Available Tubes and Bottles for the Type 45 Ti Rotor (continued)

<sup>a</sup> Use only neoprene O-ring (346242).

<sup>b</sup>Use neoprene O-ring (346242 or 885511).

<sup>c</sup> For lower fill volumes (not less than 15 mL) reduce maximum speed to 35 000 rpm.

<sup>d</sup>Delrin is a registered trademark of E.I. Du Pont de Nemours & Company.

<sup>e</sup> Each adapter holds one tube.

 $^{\rm f}$  Caps are optional with these tubes; capless fill volume is 8 mL. When run without caps, reduce speed to 15 000 rpm.

<sup>g</sup> Caps are optional with these tubes; capless fill volume is 8 mL. When run without caps, reduce speed to 30 000 rpm.

<sup>h</sup>Cap assembly includes neoprene gasket (344672) and stem (346246).

<sup>i</sup> Fill to 13 mm from the tube top.

<sup>j</sup> Maximum RCF and *k* factor are measured at the central cavity of the seven-place adapter.

# 25°C

#### **Temperature Limits**

- Plastic tubes and bottles have been centrifuge tested for use at temperatures between 2 and 25°C. For centrifugation at other temperatures, pretest tubes under anticipated run conditions.
- If plastic containers are frozen before use, make sure that they are thawed to at least 2°C prior to centrifugation.

#### Quick-Seal<sup>®</sup> Tubes

Quick-Seal tubes must be sealed prior to centrifugation. These tubes are heat sealed and do not need caps; however, spacers are required on top of the tubes when they are loaded into the rotor.

- Fill Quick-Seal tubes leaving a *small* bubble of air at the base of the neck. Do not leave a large air space—too much air can cause excessive tube deformation.
- Refer to *Rotors and Tubes*, for detailed information on the use and care of Quick-Seal tubes.

#### **Thinwall Tubes**

Thinwall polyallomer and Ultra-Clear tubes require caps for tube support. Fill the tubes as full as possible to prevent tube collapse during centrifugation. If necessary, float mineral oil (or some other lowdensity, immiscible liquid) on top of the tube contents to fill the tube to its maximum volume. (Do not use an oil overlay in Ultra-Clear tubes.)

#### **Thickwall Tubes**

Thickwall polyallomer and polycarbonate tubes can be run partially filled (at least half filled) with or without caps, but all opposing tubes for a run must be filled to the same level with liquid of the same density. Do not overfill capless tubes; be sure to note the reductions in fill volume and run speed shown in Table 1.



#### **Tube Caps**

O-Ring or Gasket Thinwall tubes require caps for tube support during centrifugation; thickwall tubes and bottles can be run with or without caps (speed reduction may be required). Use only the caps listed in Table 1. Refer to *Rotors and Tubes* for the use, assembly, and maintenance of caps.

- Inspect tube caps before use as described in *Rotors and Tubes*. Replace any damaged components.
- Inspect the O-rings or gaskets in the caps for cracks, nicks, or flattened areas. Be sure that they are dry and free of lubricant during assembly.
- Tighten aluminum caps with a hex driver while the tube is held in the tube-cap vise (305075).
- Tighten bottle caps by hand.

#### 


Thinwall tubes with red- or blue-anodized caps must be capped. The high-strength aluminum caps listed have been specially designed for use with the 38-mm diameter thinwall Ultra-Clear and polyallomer tubes; **do not** use any other caps with these tubes. Refer to *Instructions for Using Aluminum Tube Caps* (publication L5-TB-060) for the use, assembly, and maintenance of these caps. Tighten the caps with a torque wrench to 11 N•m (100 in.-lb).



#### **Polycarbonate Bottles**

The capped polycarbonate bottles may be centrifuged completely filled, or partially filled (not less than half full). Again, all opposing containers for a run must be filled to the same level. Be sure to note the reductions in run speed shown in Table 1 if bottles are partially filled.

#### **Multitube Adapters**



Seven-place aluminum adapters (350781) are available to enable running small-volume thickwall tubes in this rotor. If fewer than six of these adapters are run, load the rotor symmetrically. Orient the index mark on the top surface of each adapter toward the outside of the rotor.

#### 

Sets of adapters are matched by weight. Do not intermix adapters from different sets unless you have weighed them and all adapters for a run weigh the same to within 0.1 gram.

#### **RUN TIMES**

#### TIME HR:MIN



The k factor of the rotor is a measure of the rotor's pelleting efficiency. (Beckman Coulter has calculated the k factors for all of its preparative rotors at maximum rated speed and using full tubes.) The k factor is calculated from the formula:

$$k = \frac{\ln(r_{\max}/r_{\min})}{\omega^2} \times \frac{10^{13}}{3600}$$
(1)

. .

where  $\omega$  is the angular velocity of the rotor in radians per second ( $\omega = 0.105 \times \text{rpm}$ ),  $r_{\text{max}}$  is the maximum radius, and  $r_{\text{min}}$  is the minimum radius.

After substitution:

$$k = \frac{(2.533 \times 10^{11})\ln(r_{\text{max}}/r_{\text{min}})}{\text{rpm}^2}$$
(2)

Use the k factor in the following equation to estimate the run time t (in hours) required to pellet particles of known sedimentation coefficient s (in Svedberg units, S).

$$t = \frac{k}{s} \tag{3}$$

Run times can be estimated for centrifugation at less than maximum speed by adjusting the k factor as follows:

$$k_{\rm adj} = k \left(\frac{45\,000}{\text{actual run speed}}\right)^2$$
 (4)

Run times can also be estimated from data established in prior experiments using a different rotor if the k factor of the previous rotor is known. For any two rotors, a and b:

$$\frac{t_{\rm a}}{t_{\rm b}} = \frac{k_{\rm a}}{k_{\rm b}} \tag{5}$$

For more information on *k* factors see publication DS-719, *Use of* k *Factor for Estimating Run Times from Previously Established Run Conditions*.

#### **RUN SPEEDS**

SPEED RPM/RCF

45 000 RPM

The centrifugal force at a given radius in a rotor is a function of speed. Comparisons of forces between different rotors are made by comparing the rotors' relative centrifugal fields (RCF). When rotational speed is adjusted so that identical samples are subjected to the same RCF in two different rotors, the samples are subjected to the same force. The RCF at a number of rotor speeds is provided in Table 2.

Do not select rotational speeds that exceed the limits in Table 1. In addition, speeds must be reduced under the following circumstances:

1. If nonprecipitating solutions more dense than 1.2 g/mL are centrifuged, the maximum allowable run speed must be reduced according to the following equation:


reduced maximum speed = (45 000 rpm) 
$$\sqrt{\frac{1.2 \text{ g/mL}}{\rho}}$$
 (6)

where  $\rho$  is the density of tube contents. This speed reduction will protect the rotor from excessive stresses due to the added tube load. *Note, however, that the use of this formula may still produce maximum speeds that are higher than the limitations imposed by the use of certain tubes or adapters (see Table 1).* In such cases, use the lower of the two speeds.

and then rounded to three significant digits.					
	Relativ				
Rotor Speed (rpm)	At <i>r<sub>max</sub></i> (103.8 mm)	At <i>r<sub>av</sub></i> (69.8 mm)	At <i>r</i> <sub>min</sub> (35.9 mm)	<i>k</i> Factor*	
45 000	235 000	158 000	81 400	133	
41 000	195 000	131 000	67 600	160	
40 000	186 000	125 000	64 000	168	
35 000	142 000	95 800	49 300	220	
30 000	105 000	70 400	36 200	299	
25 000	72 700	48 900	25 100	430	
20 000	46 500	31 300	16 100	672	
15 000	26 200	17 600	9 050	1 195	
10 000	11 600	7 810	4 010	2 689	

# Table 2. Relative Centrifugal Fields for the Type 45 Ti Rotor.Entries in this table are calculated from the formula $RCF = 1.12r (RPM/1000)^2$ and then rounded to three significant digits.

\*Calculated for all Beckman Coulter preparative rotors as a measure of the rotor's relative pelleting efficiency in water at 20°C.

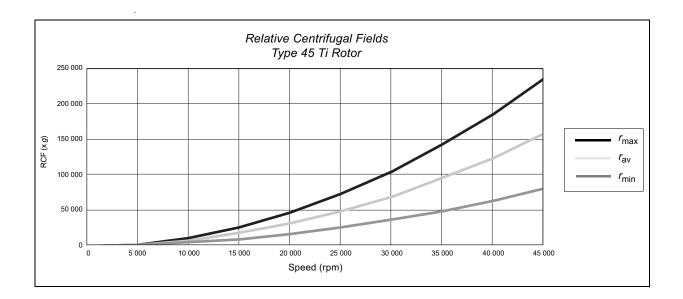

2. Further speed limits must be imposed when CsCl or other selfforming-gradient salts are centrifuged, as equation (6) does not predict concentration limits/speeds that are required to avoid precipitation of salt crystals. Solid CsCl has a density of 4 g/mL, and if precipitated during centrifugation may cause catastrophic rotor failure and instrument damage. Figures 2 and 3, together with the description and examples below, show how to reduce run speeds when using CsCl gradients.

#### **SELECTING CsCI GRADIENTS**



Precipitation during centrifugation would alter density distribution, and this would change the position of the sample bands. Curves in Figures 2 and 3 are provided up to the maximum rated speed of the rotor, but note also that *tubes or bottles must never be centrifuged faster than the limits in Table 1*.

#### 

The curves in Figures 2 and 3 are for solutions of CsCl salt dissolved in distilled water only. If other salts are present in significant concentrations, the overall CsCl concentration may need to be reduced.

Rotor speed is used to control the slope of a CsCl density gradient, and must be limited so that CsCl precipitation is avoided. Speed and density combinations that intersect on or below the curves in Figure 3 ensure that CsCl will not precipitate during centrifugation in the Type 45 Ti rotor. Curves are provided at two temperatures: 20°C (black curves) and 4°C (gray curves).

The reference curves in Figure 3 show gradient distribution at equilibrium. Each curve in Figure 3 is within the density limits allowed for the Type 45 Ti rotor: each curve was generated for a single run speed using the maximum allowable homogeneous CsCl densities (one for each fill level) that avoid precipitation at that speed. (The gradients in Figure 3 can be generated from step or linear gradients, or from homogeneous solutions. But the total amount of CsCl in solution must be equivalent to a homogeneous solution corresponding to the concentrations specified in Figure 3.) Figure 3 can also be used to approximate the banding positions of sample particles.

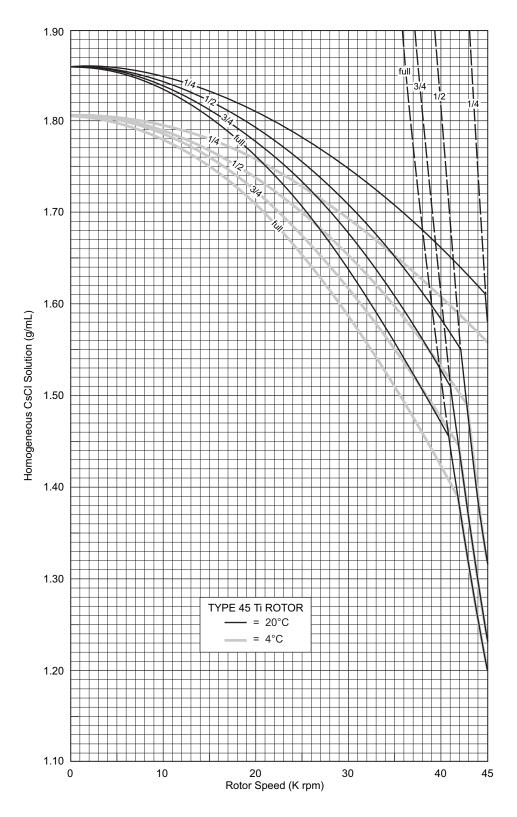


Figure 2. Precipitation Curves for the Type 45 Ti Rotor. Using combinations of rotor speeds and homogeneous CsCl solution densities that intersect on or below these curves ensures that CsCl will not precipitate during centrifugation. The dashed line is a representation of equation (6), and is shown here to illustrate the inability of that equation to predict CsCl precipitation.


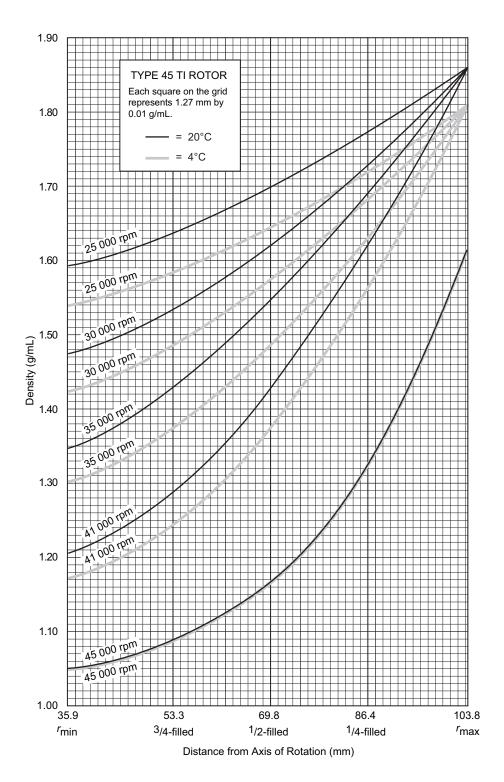


Figure 3. CsCl Gradients at Equilibrium for the Type 45 Ti Rotor. Centrifugation of homogeneous CsCl solutions at the maximum allowable speeds (from Figure 2) results in gradients presented here.

#### **ADJUSTING FILL VOLUMES**




Figures 2 and 3 show that several fill volumes are possible in a tube. If a tube is partially filled with gradient solution, float mineral oil (or some other low-density, immiscible liquid) on top of the tube contents to fill the tube to its maximum volume. (Do not use an oil overlay in Ultra-Clear tubes.) Note that for a given CsCl density, as the fill level decreases the maximum allowable speed increases. Partial filling may be desirable when there is little sample or when you wish to shorten the run time.

For example, a *quarter-filled* tube of 1.55-g/mL homogeneous CsCl solution at 20°C may be centrifuged at 45 000 rpm (see Figure 2). The segment of the 45 000-rpm curve (Figure 3) from the quarter-filled line to 1.86 g/mL at the tube bottom represents this gradient. The same solution in a *half-filled* tube may be centrifuged no faster than 42 500 rpm, and 41 000 rpm in a *three-quarter-filled* tube. (Gradient curves not shown in Figure 3 can be interpolated.) A tube *full* of the 1.55-g/mL CsCl solution may be centrifuged no faster than 35 000 rpm. (Note that the 45 000-rpm curves in Figure 3 are identical for 4 and 20°C.)

#### **TYPICAL EXAMPLES FOR DETERMINING CsCI RUN PARAMETERS**

At Speed





#### Example A: Knowing homogeneous CsCl solution density (1.44 g/mL) and approximate particle buoyant densities (1.39 and 1.46 g/mL), at 20°C, where will particles band?

- 1. In Figure 2, find the curve that corresponds to the desired run temperature (20°C) and fill volume (full). The maximum allowable rotor speed is determined from the point where this curve intersects the homogeneous CsCl density (41 000 rpm).
- 2. In Figure 3, sketch in a horizontal line corresponding to each particle's buoyant density.
- 3. Mark the point in the figure where each particle density intersects the curve corresponding to the selected run speed and temperature.
- 4. Particles will band at these locations across the tube diameter at equilibrium during centrifugation.

In this example, particles will band about 66 and 74 mm from the axis of rotation, about 8 mm of centerband-to-centerband separation at the rotor's 24-degree tube angle. When the tube is held upright, there will

Upright



be about 9 mm of centerband-to-centerband separation. This interband distance,  $d_{up}$ , can be calculated from the formula:

$$d_{\rm up} = \frac{d_{\theta}}{\cos} \tag{7}$$

where  $d_{\theta}$  is the interband distance when the tube is held at an angle,  $\theta$ , in the rotor.


# Example B: Knowing particle buoyant densities (1.70 and 1.65 g/mL), how do you achieve good separation?

- 1. In Figure 3, sketch in a horizontal line corresponding to each particle's buoyant density.
- 2. Select the curve at the desired temperature (4°C) and tube volume (full) that gives the best particle separation.
- 3. Note the run speed along the selected curve (25 000 rpm).
- 4. From Figure 2, select the maximum homogeneous CsCl density (in this case, 1.65 g/mL) that corresponds to the temperature and run speed established above. These parameters will provide the particle-banding pattern selected in Step 2.

In this example, particles will band at about 71 and 83 mm from the axis of rotation (about 12 mm apart). When the tube is held upright there will be about 13 mm of center-of-band to center-of-band separation.

#### **CARE AND MAINTENANCE**


#### MAINTENANCE

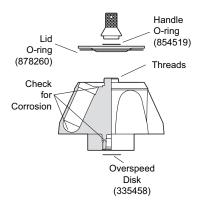

#### 

Do not use sharp tools on the rotor that could cause scratches in the rotor surface. Corrosion begins in scratches and may open fissures in the rotor with continued use.

• Periodically (at least monthly) inspect the rotor, especially inside cavities, for rough spots or pitting, white powder deposits (frequently aluminum oxide), or heavy discoloration. If any

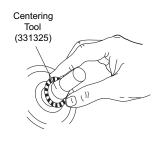

of these signs are evident, do not run the rotor. Contact your Beckman Coulter representative for information about the Field Rotor Inspection Program and the rotor repair center.

- Regularly lubricate the metal threads in the rotor with a thin, even coat of Spinkote lubricant (306812). Failure to keep these threads lubricated can result in damaged threads.
- Regularly apply silicone vacuum grease (335148) to the O-rings. Replace O-rings about twice a year or whenever worn or damaged.
- Regularly inspect the overspeed disk. If a disk is scratched, damaged, or missing, replace it as described in *Rotors and Tubes*.

Refer to the chemical resistances table in Appendix A of *Rotors and Tubes* for chemical compatibilities of rotor and accessory materials. Your Beckman Coulter representative provides contact with the Field Rotor Inspection Program and the rotor repair center.

#### CLEANING



Wash the rotor and rotor components immediately if salts or other corrosive materials are used or if spillage has occurred. Do not allow corrosive materials to dry on the rotor.


Under normal use, wash the rotor frequently (at least weekly) to prevent buildup of residues.

- 1. Remove the O-rings before washing.
- Wash the rotor and lid in a mild detergent, such as Beckman Solution 555<sup>™</sup>(339555), that won't damage the rotor. The Rotor Cleaning Kit (339558) contains two special plastic-coated brushes and two quarts of Solution 555 for use with rotors and accessories. Dilute the detergent 10 to 1 with water.

#### 

Do not wash rotor components in a dishwasher. Do not soak in detergent solution for long periods, such as overnight.

3. Thoroughly rinse the cleaned rotor and components with distilled water.

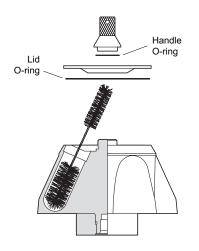

- 4. Air-dry the rotor and lid upside down. *Do not use acetone to dry the rotor*.
- 5. Apply a thin, even coat of silicone vacuum grease to the lid O-ring before replacing it in the groove in the outer rim of the lid. Also apply silicone vacuum grease to the handle O-ring before reassembly.

Clean metal threads every 6 months, or as necessary. Use a brush and concentrated Solution 555. Rinse and dry thoroughly, then lubricate lightly but evenly with Spinkote to coat all threads.

Periodically remove the O-rings and wipe clean as necessary. Clean the O-ring grooves with a cotton-tipped swab. Reapply a light film of silicone vacuum grease.

#### DECONTAMINATION



If the rotor (and/or accessories) becomes contaminated with radioactive material, it should be decontaminated using a solution that will not damage the anodized surfaces. Beckman Coulter has tested a number of solutions and found two that do not harm anodized aluminum: RadCon Surface Spray or IsoClean Solution (for soaking),1 and Radiacwash.2

#### IIII NOTE

IsoClean can cause fading of colored anodized surfaces. Use it only when necessary and remove it promptly from surfaces.

While Beckman Coulter has tested these methods and found that they do not damage components, no guarantee of sterility or disinfection is expressed or implied. Consult your laboratory safety officer regarding the proper decontamination methods to use.

If the rotor or other components are contaminated with toxic or pathogenic materials, follow appropriate decontamination procedures as outlined by your laboratory safety officer.



<sup>&</sup>lt;sup>1</sup> In U.S., contact Nuclear Associates (New York); in Eastern Europe and Commonwealth States, contact Victoreen GmbH (Munich);

in South Pacific, contact Gammasonics Pty. Ltd. (Australia); in Japan, contact Toyo Medic Co. Ltd. (Tokyo).

<sup>&</sup>lt;sup>2</sup> In U.S., contact Biodex Medical Systems (Shirley, New York); internationally, contact the U.S. office to find the dealer closest to you.

121°C

#### STERILIZATION AND DISINFECTION

The rotor and all rotor components can be autoclaved at 121°C for up to an hour. Remove the lid from the rotor and place the rotor, lid, and spacers in the autoclave upside down.
Ethanol (70%)<sup>3</sup> or hydrogen peroxide (6%) may be used on all rotor components, including those made of plastic. Bleach (sodium hypochlorite) may be used, but may cause discoloration of anodized surfaces. Use the minimum immersion time for each solution,

per laboratory standards.

While Beckman Coulter has tested these methods and found that they do not damage the rotor or components, no guarantee of sterility or disinfection is expressed or implied. When sterilization or disinfection is a concern, consult your laboratory safety officer regarding proper methods to use.

Refer to publication IN-192, included in each box of tubes or bottles, for tube and bottle sterilization and disinfection procedures. *Quick-Seal and thinwall open-top tubes are disposable and should be discarded after a single use.* 

#### STORAGE

When the rotor is not in use, store it in a dry environment (not in the instrument) with the lid removed to allow air circulation so moisture will not collect in the tube cavities.

<sup>&</sup>lt;sup>3</sup> Flammability hazard. Do not use in or near operating centrifuges.

#### **RETURNING A ROTOR**



Before returning a rotor or accessory for any reason, prior permission (a Returned Goods Authorization form) must be obtained from Beckman Coulter, Inc. This RGA form may be obtained from your local Beckman Coulter sales office, and should contain the following information:

- serial number
- history of use (approximate frequency of use),
- reason for the return,
- original purchase order number, billing number, and shipping number, if possible,
- name and phone number of the person to be notified upon receipt of the rotor or accessory at the factory, and,
- name and phone number of the person to be notified about repair costs, etc.

To protect our personnel, it is the customer's responsibility to ensure that all parts are free from pathogens and/or radioactivity. Sterilization and decontamination must be done before returning the parts. Smaller items (such as tubes, bottles, etc.) should be enclosed in a sealed plastic bag.

All parts must be accompanied by a note, plainly visible on the outside of the box or bag, stating that they are safe to handle and that they are not contaminated with pathogens or radioactivity. Failure to attach this notification will result in return or disposal of the items without review of the reported problem.

Use the address label printed on the RGA form when mailing the rotor and/or accessories to:

Beckman Coulter, Inc. 1050 Page Mill Road Palo Alto, CA 94304

Attention: Returned Goods

Customers located outside the United States should contact their local Beckman Coulter office.

#### SUPPLY LIST

#### 

To obtain copies of referenced publications, contact Beckman Coulter, Inc., Technical Publications Department, 1050 Page Mill Road, Palo Alto, CA 94304, U.S.A. (telephone 650-859-1753; fax 650-859-1375)

See the *Beckman Coulter Ultracentrifuge Rotors, Tubes, & Accessories Catalog* (BR-8101, available at www.beckmancoulter.com) for detailed information on ordering parts and supplies or contact Beckman Coulter sales (1-800-742-2345 in the United States; worldwide offices are listed on the back cover of this manual). For your convenience, a partial list is given below.

#### **REPLACEMENT ROTOR PARTS**

Type 45 Ti rotor assembly	339160
Rotor lid	339163
Rotor handle	339164
Handle O-ring	854519
Lid O-ring	878260
Overspeed disk (45 000 rpm)	335458

#### **OTHER**

Tubes, bottles, and accessories see Tabl	e l
Quick-Seal Cordless Tube Topper kit, 60 Hz	312
Quick-Seal Cordless Tube Topper kit, 50 Hz (Europe)	313
Quick-Seal Cordless Tube Topper kit, 50 Hz (Great Britain) 3583	314
Quick-Seal Cordless Tube Topper kit, 50 Hz (Australia)	315
Tube Topper rack (38-mm dia. tubes)	125
Tool kit (for red and blue caps)	202
Tube removal tool (for capped tubes)	
Torque wrench	121
Socket for <sup>3</sup> /4-in. (19 mm) cap nuts	123
Socket adapter	122
Hex driver for 11-mm (7/16-in.) cap nuts	
Tube-cap vise	)75
Removal tool (polycarbonate bottles)	133
Tube removal tool (Quick-Seal tubes)	568
Spinkote lubricant (1 oz)	312
Silicone vacuum grease (2 oz)	148
Rotor Cleaning Kit	558
Beckman Solution 555 (1 qt) 3395	555
Rotor cleaning brush	379
Centering tool (for replacing overspeed disk)	325

#### ULTRACENTRIFUGE ROTOR WARRANTY

All Beckman Coulter ultracentrifuge Fixed Angle, Vertical Tube, Near Vertical Tube, Swinging Bucket, and Airfuge rotors are warranted against defects in materials or workmanship for the time periods indicated below, subject to the Warranty Conditions stated below.

Preparative Ultracentrifuge Rotors	5 years — No Proration
Analytical Ultracentrifuge Rotors	5 years — No Proration
ML and TL Series Ultracentrifuge Rotors	5 years — No Proration
Airfuge Ultracentrifuge Rotors	1 year — No Proration

For Zonal, Continuous Flow, Component Test, and Rock Core ultracentrifuge rotors, see separate warranty.

#### Warranty Conditions (as applicable)

- 1) This warranty is valid for the time periods indicated above from the date of shipment to the original Buyer by Beckman Coulter or an authorized Beckman Coulter representative.
- 2) This warranty extends only to the original Buyer and may not be assigned or extended to a third person without written consent of Beckman Coulter.
- 3) This warranty covers the Beckman Coulter Centrifuge Systems only (including but not limited to the centrifuge, rotor, and accessories) and Beckman Coulter shall not be liable for damage to or loss of the user's sample, non-Beckman Coulter tubes, adapters, or other rotor contents.
- 4) This warranty is void if the Beckman Coulter Centrifuge System is determined by Beckman Coulter to have been operated or maintained in a manner contrary to the instructions in the operator's manual(s) for the Beckman Coulter Centrifuge System components in use. This includes but is not limited to operator misuse, abuse, or negligence regarding indicated maintenance procedures, centrifuge and rotor classification requirements, proper speed reduction for the high density of certain fluids, tubes, and tube caps, speed reduction for high-temperature operation.
- 5) Rotor bucket sets purchased concurrently with or subsequent to the purchase of a Swinging Bucket Rotor are warranted only for a term co-extensive with that of the rotor for which the bucket sets are purchased.
- 6) This warranty does not cover the failure of a Beckman Coulter rotor in a centrifuge not of Beckman Coulter manufacture, or if the rotor is used in a Beckman Coulter centrifuge that has been modified without the written permission of Beckman Coulter, or is used with carriers, buckets, belts, or other devices not of Beckman Coulter manufacture.
- 7) Rotor parts subject to wear, including but not limited to rotor O-rings, VTi, NVT<sup>TM</sup>, TLV, MLN, and TLN rotor tube cavity plugs and gaskets, tubing, tools, optical overspeed disks, bearings, seals, and lubrication are excluded from this warranty and should be frequently inspected and replaced if they become worn or damaged.
- 8) Keeping a rotor log is not mandatory, but may be desirable for maintenance of good laboratory practices.

#### **Repair and Replacement Policies**

- If a Beckman Coulter rotor is determined by Beckman Coulter to be defective, Beckman Coulter will repair or replace it, subject to the Warranty Conditions. A replacement rotor will be warranted for the time remaining on the original rotor's warranty.
- 2) If a Beckman Coulter centrifuge is damaged due to a failure of a rotor covered by this warranty, Beckman Coulter will supply free of charge (i) all centrifuge parts required for repair (except the drive unit, which will be replaced at the then current price less a credit determined by the total number of revolutions or years completed, provided that such a unit was manufactured or rebuilt by Beckman Coulter), and (ii) if the centrifuge is currently covered by a Beckman Coulter warranty or Full Service Agreement, all labor necessary for repair of the centrifuge.
- 3) If a Beckman Coulter rotor covered by this warranty is damaged due to a malfunction of a Beckman Coulter ultracentrifuge covered by an Ultracentrifuge System Service Agreement, Beckman Coulter will repair or replace the rotor free of charge.
- 4) If a Beckman Coulter rotor covered by this warranty is damaged due to a failure of a Beckman Coulter tube, bottle, tube cap, spacer, or adapter, covered under the Conditions of this Warranty, Beckman Coulter will repair or replace the rotor and repair the instrument as per the conditions in policy point (2) above, and the replacement policy.
- 5) Damage to a Beckman Coulter rotor or instrument due to the failure or malfunction of a non-Beckman Coulter tube, bottle, tube cap, spacer, or adapter is not covered under this warranty, although Beckman Coulter will assist in seeking compensation under the manufacturer's warranty.

#### Disclaimer

IT IS EXPRESSLY AGREED THAT THE ABOVE WARRANTY SHALL BE IN LIEU OF ALL WARRANTIES OF FITNESS AND OF THE WARRANTY OF MERCHANTABILITY AND BECKMAN COULTER, INC. SHALL HAVE NO LIABILITY FOR SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER ARISING OUT OF THE MANUFAC-TURE, USE, SALE, HANDLING, REPAIR, MAINTENANCE, OR REPLACEMENT OF THE PRODUCT.

#### **Factory Rotor Inspection Service**

Beckman Coulter, Inc., will provide free mechanical and metallurgical inspection in Palo Alto, California, USA, of any Beckman Coulter rotor at the request of the user. (Shipping charges to Beckman Coulter are the responsibility of the user.) Rotors will be inspected in the user's laboratory if the centrifuge in which they are used is covered by an appropriate Beckman Coulter Service Agreement. Contact your local Beckman Coulter office for details of service coverage or cost.

Before shipping, contact the nearest Beckman Coulter Sales and Service office and request a Returned Goods Authorization (RGA) form and packaging instructions. Please include the complete rotor assembly, with buckets, lid, handle, tube cavity caps, etc. A SIGNED STATEMENT THAT THE ROTOR AND ACCESSO-RIES ARE NON-RADIOACTIVE, NON-PATHOGENIC, NON-TOXIC, AND OTHERWISE SAFE TO SHIP AND HANDLE IS REQUIRED.

### **Beckman Coulter Worldwide Biomedical Research Division Offices**

#### AUSTRALIA

Beckman Coulter Australia Pty Ltd Unit D, 24 College St. Gladesville, NSW 2111 Australia Telephone: (61) 2 9844-6000 or toll free: 1 800 060 880 Fax: (61) 2 9844-6096 email: lifescienceaustralia@beckman.com

#### CANADA

Beckman Coulter (Canada) Inc. 6755 Mississauga Road, Suite 600 Mississauga, Ontario Canada L5N 7Y2 Telephone: (905) 819-1234 Fax: (905) 819-1485

#### CHINA

Beckman Coulter Inc. Beijing Representative Office Unit 2005Å, 2006-2009, East Ocean Center Jian Guomenwai Avenue Beijing 100004 China Telephone: (86) 10 6515 6028 Fax: (86) 10 6515 6025, 6515 6026

#### EASTERN EUROPE/

MIDDLE EAST/NORTH AFRICA Beckman Coulter International S.A. 22, Rue Juste-Olivier Case Postale 301-303 CH-1260 Nyon, Switzerland Telephone: (41) 22 994 07 07 Fax: (41) 22 994 07 00

#### FRANCE

Beckman Coulter France S.A. Paris Nord II, 33/66 rue des Vanesses B.P. 50359 Villepinte, France 95942 ROISSY CDG Cedex Telephone: 01 49 90 90 00 Fax: 01 49 90 90 10 e-mail: bioresearch.france@beckman.com

#### GERMANY

Beckman Coulter GmbH Europark Fichtenhain B-13 47807 Krefeld Germany Telephone: 49 21 513335 Fax: 49 21 51333633 e-mail: bioresearch.de@beckman.com



HONG KONG

Beckman Coulter Hong Kong Ltd. 12th Floor, Oxford House 979 King's Road Taikoo Place, Hong Kong Telephone: (852) 2814 7431, 2814 0481 Fax: (852) 2873 4511

#### ITALY

Beckman Coulter S.p.a. Centro Direzionale Lombardo Palazzo F/1, Via Roma 108 20060 Cassina de' Pecchi Milano, Italy Telephone: 02-953921 Fax: 02-95392264

#### JAPAN

Beckman Coulter K.K. Toranomon 37 Mori Bldg. 3-5-1, Toranomon Minato-ku, Tokyo 105-0001 Japan Telephone: 03-5404-8359 Fax: 03-5404-8436

#### MEXICO

Beckman Coulter de Mexico S.A. DE C.V. Avenida Popocatépetl #396 Colonia Gral. Pedro Maria Anaya Codigo Postal 03340 Mexico, D.F. Mexico Telephone: 525 605-77-70 Fax: 525 575-18-25

#### **NETHERLANDS**

Beckman Coulter Nederland B.V. Nijverheidsweg 21 3641 RP-Mijdrecht Postbus 47 3640 AA Mijdrecht The Netherlands Telephone: 0297-230630 Fax: 0297-288082

#### SINGAPORE

Beckman Coulter Singapore Pte. Ltd. 116 Changi Road Unit #03-01/02 Singapore 419718 Telephone: (65) 6339 3633 Fax: (65) 6336 6303

#### SOUTH AFRICA/SUB-SAHARAN AFRICA Beckman Coulter Stand 1A Primegro Park Tonetti Street

1685 Halfway House Johannesburg Republic of South Africa Telephone: (27) 11-805-2014/5 Fax: (27) 11-805-4120 e-mail: beckman@intekom.co.za

#### SPAIN

Beckman Coulter España S.A. C/ Caleruega, 81 28033 Madrid, Spain Telephone: 91 3836080 Fax: 91 3836096 email: bioresearch.espana@beckman.com

#### SWEDEN

Beckman Coulter AB Archimedesvaegen 7 Box 111 56 SE-168 11 Bromma Sweden Telephone: (0)8 564 85 900 Telefax: (0)8 564 85 901

#### SWITZERLAND

Beckman Coulter International S.A. 22, Rue Juste-Olivier Case Postale 301-303 CH-1260 Nyon Switzerland Telephone: 0800 850 810 Fax: 0848 850 810

#### TAIWAN

Beckman Coulter Taiwan Inc. Taiwan Branch 8th Floor 216 Tun Hwa South Road, Section 2 Taipei 106, Taiwan Republic of China Telephone: (886) 2 2378 3456 Fax: (886) 2 2377 0408

#### TURKEY

Beckman Coulter Ltd. E-5 Yanyol Faith Cad. 81410 Soganlik Kartal Istanbul Turkev Telephone: 90 216 309 1900 Fax: 90 216 309 0090

#### UNITED KINGDOM

Beckman Coulter United Kingdom Ltd Oaklev Court Kingsmead Business Park London Road High Wycombe Buckinghamshire HP11 1JU England, U.K. Telephone: 01494 441181 Fax: 01494 447558 e-mail: beckman\_uk@beckman.com

Authorized dealers in other countries.

Sales and Service: 1-800-742-2345 • Internet: www.beckmancoulter.com • Telex: 678413 • Fax: 1-800-643-4366

Beckman Coulter, Inc. • 4300 N. Harbor Boulevard, Box 3100 • Fullerton, California 92834-3100

